



| <b>OPERATIONS INSIDE THE VEHICLE</b>  |  |  |          |              |                                       |   |   |   |   |   |   |   |   |   |   |
|---|--|--|----------|--------------|---------------------------------------|---|---|---|---|---|---|---|---|---|---|
| Check brake pedal and clutch pedal for free play  |  |  |          |              | I                                     | I | I | I | I | I | I | I | I | I | I |
| Check parking brake lever stroke and play   |  |  |          |              | I                                     | I | I | I | I | I | I | I | I | I | I |
| Replace air purifier filter   |  | Normal usage   |          |              | R                                     | R | R | R | R | R | R | R | R | R | R |
| Check operation of all functions and lights   |  |  |          |              | I                                     | I | I | I | I | I | I | I | I | I |   |
| <b>OPERATIONS OUTSIDE THE VEHICLE</b>   |  |  |          |              |                                       |   |   |   |   |   |   |   |   |   |   |
| Check wheel alignment   |  |  |          |              |                                       | I |   | I |   | I |   | I |   | I |   |
| Check tyre pressures  |  |  |          |              | I                                     | I | I | I | I | I | I | I | I | I | I |
| Check front and rear wheel bearings for play  |  |  |          |              |                                       |   | I |   |   | I |   |   | I |   |   |
| Check brake hoses and pipes for leakage   |  |  |          |              | I                                     | I | I | I | I | I | I | I | I | I | I |
| Check brake pads and discs for wear   |  | Normal usage   |          |              | I                                     | I | I | I | I | I | I | I | I | I |   |
|   |  | Severe usage   |          |              | I : Every 7,500km or every 6 months   |   |   |   |   |   |   |   |   |   |   |
| Check fuel hoses and pipes for leakage or deterioration                                       |  |  |          |              |                                       | I |   | I |   | I |   | I |   | I |   |
| <b>OPERATIONS AFTER ENGINE IS WARMED UP</b>   |  |  |          |              |                                       |   |   |   |   |   |   |   |   |   |   |
| Check automatic transmission for fluid leakage<br>(In case of leakage, check the fluid level) |  | F1CJD, W1CJD, R5AWF, R6AWH, R8AWG, V5AWF, V6AWH and V8AWG model,R- SST |          |              | I                                     | I | I | I | I | I | I | I | I | I |   |
| Change automatic transmission fluid and CVT fluid   |  | R- SST   |          | Normal usage | R :Every 90,000km                     |   |   |   |   |   |   |   |   |   |   |
|   |  | *Oil filter replacement required                                       |          | Severe usage | R :Every 45,000km                     |   |   |   |   |   |   |   |   |   |   |
| Change engine oil   |  | Common-rail direct injection diesel engine                             | With DPF | Normal usage | R : Every 15,000km or every 12 months |   |   |   |   |   |   |   |   |   |   |
|   |  |  |          | Severe usage | R : Every 7,500km                     |   |   |   |   |   |   |   |   |   |   |
| Replace engine oil filter   |  | Common-rail direct injection diesel engine                             | With DPF | Normal usage | R : Every 15,000km or every 12 months |   |   |   |   |   |   |   |   |   |   |
|   |  |  |          | Severe usage | R : Every 7,500km                     |   |   |   |   |   |   |   |   |   |   |
| Check exhaust gas recirculation (EGR) system (petrol-powered vehicles)                        |  |  |          |              | I                                     | I | I | I | I | I | I | I | I | I | I |
| <b>OTHERS</b>   |  |  |          |              |                                       |   |   |   |   |   |   |   |   |   |   |
| Check body condition for damage   |  |  |          |              | I : Every year                        |   |   |   |   |   |   |   |   |   |   |
| Reset maintenance service interval reminder   |  |  |          |              | I                                     | I | I | I | I | I | I | I | I | I | I |
| Road test   |  |  |          |              | I                                     | I | I | I | I | I | I | I | I | I |   |

**NOTE:**

\*1 : If found any noise from the valve any time, please check the valve clearance.

"Severe usage" specifications apply to only vehicles used under severe operating conditions.

Severe operating conditions include the following cases :

- (1) Driving in a dusty area or in an area in which the vehicle is likely to be exposed to salty air or brine.
- (2) Driving on rough roads, on submerged roads, or hilly areas.
- (3) Driving in cold zones.
- (4) Engine idling for a long time or short-distance travel during cold weather.
- (5) Frequent, sudden application of brakes.
- (6) Towing of a trailer.
- (7) Use as a taxi or as a rent-a-car.
- (8) More than 50% of operation time in heavy city traffic in hot temperatures of 32°C or higher.
- (9) More than 50% of operation time at speeds of 120km/h or higher in hot temperatures of 30°C or higher.
- (10) Operation under excessive load.