2022 MY LB MIRAGE INSPECTION AND MAINTENANCE SCHEDULE

For items which indicate both distance and time (in months), the inspection should be madeat whichever (distance or time) comes first.

Maintenance operation code

I: Inspection L: Lubrication R: Replace or change

				Service Intervals (Odometer reading or months, whichever occurs first)														
Items Months				12	24	36	48	60	72	84	96	108	120	132	144	156	168	
Odometer Reading × 1000 km			15	30	45	60	75	90	105	120	135		165	180		210		
OPERATIONS INSIDE THE ENGINE COMPARTMENT			15	50	45	60	75	90	105	120	155	150	169	160	190	210		
Check drive belt for cracks, fraying, wear, and adjust its tension				I	Т	Т	Т	Т	Т	Т	Т	Т	Т	т	т	т	т	
Replace spark plugs Platinum-tipped type Unleaded petrol-powered vehicles						R	:Ever	vy 90 (000kr	n -				-			_	
Check valve clearance *1	3A9, 4A9 and 4B1, 4B4 engines				R: Every 90,000km I: Every 90,000km													
Check valve clearance 1 5A3, 4A3 and 4B1, 4B4 engines Check radiator hoses for damage and proper connection																		
Check engine coolant level in reservoir			Т	T	Т	Ť	Т	Ť	Т	Ť	Т	 	Т	Ť	┰	Ť		
Change engine coolant 3A9, 4B1, 4J1, and 4N1 engines					R:First 165,000km or 8 years, thereafter every 105,000km or 5 years													
Check air cleaner element for clogging and damage Normal usage			I	T	T	T	T	T	I	T	T	<u> </u>	T	T	T	<u></u>		
Severe usage			I :Every 7.500km or every 6 months															
Replace air cleaner element Normal usage					R		1	R			R	Ī		R				
Check fluid level in brake reservoir and clutch reservoir			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Change brake fluid				R		R		R		R		R		R		R		
Check battery condition			I	I	Ι	I	I	Ι	I	I	I	I	I	Ι	I	Ι		
Replace fuel filter Petrol-powered vehicles				•	R	: Eve	ry 150	0,000	km or	every	10ye	ars						
OPERATIONS UNDER THE VEHICLE																		
Check suspension system for damage and looseness			I	I	Ι	I	I	I	I	I	I	I	I	I	I	I		
Check suspension arm ball joints for play, and dust covers for damage			I	Ι	Ι	I	I	Ι	I	I	I	I	I	Ι	I	Ι		
Check driveshaft boots for damage Normal usage			I	Ι	Ι	Ι	Ι	Ι	I	Ι	Ι	I	I	Ι	I	Ι		
Severe usage			I Every 7,500km															
Check steering linkage for damage and loose connections (including seals, boots and power assist fluid)			I	Ι	Ι	Ι	Ι	I	I	I	I	I	I	Ι	Ι	Ι		
Check manual transmission for oil leakage (In case of leakage, check the oil level)			I	Ι	Ι	Ι	Ι	I	I	I	I	I	I	Ι	I	<u>I</u>		
Change gear oil in manual transmission	F5MBD, F5MBB, W5MBB,		Normal usage	R : Every 195,000km														
	F6MBA, F6MBC and W6MBA mo	dels	Severe usage	R : Every 90,000km														
Check exhaust pipe connections for gas leakage, and check pipe installation				I		I		I		I		I		Ι		I		
OPERATIONS INSIDE THE VEHICLE																		
Check brake pedal and clutch pedal for free play			I	I	Ι	Ι	Ι	Ι	I	I	I	I	Ι	Ι	Ι	I		
Check parking brake lever stroke and play			I	I	I	I	I	I	I	I	I	I	I	I	_I	I		
Replace air purifier filter Normal usage			R	R	R	R	R	R	R	R	R	R	R	R	R	R		
Check operation of all functions and lights			I	l I	I	L	I	L I	I	I	l I	<u> I</u>	I	I	_ I	Ι		

OPERATIONS OUTSIDE THE VEHICLE															
Check wheel alignment			I		Ι		I		I		I		I		Ι
Check tyre pressures		I	I	Ι	Ι	I	Ι	I	I	I	I	I	I	Ι	Ι
Check front and rear wheel bearings for play					Ι				I				I		
Check brake hoses and pipes for leakage		I	I	Ι	Ι	Ι	Ι	I	I	I	I	I	I	Ι	Ι
Check brake pads and discs for wear Normal usage Severe usage		I	I	I	Ι	Ι	I	I	I	I	I	I	I	Ι	Ι
		I : Every 7,500km or every 6 months													
Check brake shoe linings and drums (drum in disc) for wear Normal Severe u			I		Ι		I		I		I		I		Ι
		I	I	Ι	Ι	Ι	Ι	Ι	I	I	I	I	I	Ι	Ι
Check fuel hoses and pipes for leakage or deterioration			I		Ι		Ι		I		I		I		Ι
OPERATIONS AFTER ENGINE IS WARMED UP															
Check fluid level in automatic transmission and CVT		I	I	Ι	Ι	Ι	Ι	Ι	I	I	I	I	I	Ι	Ι
Change automatic transmission fluid and CVT fluid Normal usage Severe usage		R :Every 90,000km													
		R :Every 40,000km													
Change engine oil Normal usage Severe usage		R: Every 15,000km or every 12 months													
		R: Every 7,500km													
Replace engine oil filter Normal usage Severe usage		R: Every 15,000km or every 12 months													
		R : Every 7,500km													
Check exhaust gas recirculation (EGR) system (petrol-powered vehicles)		I	I	I	Ι	Ι	I	I	I	I	I	I	I	Ι	Ι
OTHERS															
Check body condition for damage		I : Every year													
Reset maintenance service interval reminder		I	I	I	I	I	I	I	I	I	I	I	I	Ι	Ι
Road test		I	I	I	I	I	I	I	I	I	I	I	I	I	I

NOTE:

Severe operating conditions include the following cases:

- (1) Driving in a dusty area or in an area in which the vehicle is likely to be exposed to salty air or brine.
- (2) Driving on rough roads, on submerged roads, or hilly areas.
- (3) Driving in cold zones.
- (4) Engine idling for a long time or short-distance travel during cold weather.
- (5) Frequent, sudden application of brakes.
- (6) Towing of a trailer.
- (7) Use as a taxi or as a rent-a-car.
- (8) More than 50% of operation time in heavy city traffic in hot temperatures of 32°C or higher.
- (9) More than 50% of operation time at speeds of 120km/h or higher in hot temperatures of 30°C or higher.
- (10) Operation under excessive load.

^{*1:} If found any noise from the valve any time, please check the valve clearance.

[&]quot;Severe usage" specifications apply to only vehicles used under severe operating conditions.