24MY XD ASX INSPECTION AND MAINTENANCE SCHEDULE

For items which indicate both distance and time (in months), the inspection should be made at whichever (distance or time) comes first. Maintenance operation code I: Inspection L: Lubrication R: Replace or change

			Service Intervals (Odometer reading or months, whichever occurs first)													
Items	nths		12	24	36	48	60	72	84	96	108	120		144	 	168
	Odometer Reading	× 1000 km	15	30	45	60	75	90	105	-		150		180		
OPERATIONS INSIDE THE ENGINE COMPARTMENT								1 , 0	1 200	1220	1	1 200			270	
Check drive belt for cracks, fraying, wear, and adjust its tension			ı	ı	ı	Т	Т	T	T	Т	l i	Т	Т	T	ı	
	Replace spark plugs							R						R		
Check	valve clearance (* Denotes audible check only) *1		l*	l*	*	*	l*	I	l*	*	l*	*	l*	I	l*	*
Check	adiator hoses for damage and proper connection		ı	ı	Ι	ı	ı	Ι	ı	1	I	Т	ı	ı	ı	-
Check engine coolant level in reservoir		ı	ı	Ι	ı	ı	Ι	ı	ı	I	Т	ı	ı	ı	-	
Change engine coolant *2									R					R		
Check air cleaner element for clogging and damage Normal usage Severe usage		I	I	ı	I	ı	Ι	Ι	I	1	Ι	ı	I	I	ı	
		Severe usage					I: Ev	ery 7,5	500km	or ev	ery 6 m	onths				
Poplac	Normal usage				R			R			R			R		
Replace air cleaner element Severe us		Severe usage	R: More frequently													
Check '	Check fluid level in brake reservoir and clutch reservoir		- 1	I	- 1	- 1	- 1	- 1	- 1	- 1	I	- 1	- 1	- 1	1	- 1
	brake fluid			R		R		R		R		R		R		R
Check	pattery condition		- 1	- 1	- 1	- 1	- 1	- 1	- 1	- 1	I	ı	- 1	- 1	- 1	- 1
Replac	e fuel filter											R				
OPERATIONS UNDER THE VEHICLE																
	suspension system for damage and looseness		ı	Ι	ı	ı	ı	Ι	ı	ı	ı	ı	ı	ı	I	ı
Check	suspension arm ball joints for play, and dust covers for damage		ı	Ι	Ι	ı	ı	I	ı	ı	I	ı	ı	ı	I	Ι
Check driveshaft boots for damage	driveshaft hoots for damage	Normal usage	- 1	I	- 1	ı	ı	- 1	- 1	- 1	1	ı	- 1	ı	I	- 1
	Severe usage		l: Every 7,500km													
	Check steering linkage for damage and loose connections (including seals, boots and power assist fluid)		I	I	ı	ı	- 1	- 1	- 1	I	I	ı	- 1	- 1	1	- 1
Check	eck manual transmission for oil leakage (In case of leakage, check the oil level)		ı	I	ı	ı	ı	I	I	ı	I	ı	ı	I	I	- 1
Change	e gear oil in manual transmission	Normal usage													R	
		Severe usage						R						R	<u> </u>	
	exhaust pipe connections for gas leakage, and check pipe installation		I	I	ı	I	I	I	I	I	I	I	ı	I	I	ı
OPERATIONS INSIDE THE VEHICLE								•	•							
_	prake pedal and clutch pedal for free play		ı	Ι	ı	ı	ı	ı	ı	ı	ı		ı	ı	- 1	ı
Check	parking brake lever stroke and play		ı	I	ı	ı	ı	I	I	ı	ı		ı	ı		ı
Replace	air purifier filter	Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R
		Severe usage		R: More frequently												
Check operation of all functions and lights OPERATIONS OUTSIDE THE VEHICLE			l I		l		<u> </u>		<u> </u>		<u> </u>	<u> </u>				
										Π.	т.	т.			 	
	wheel alignment (report tyre abnormal wear patterns)		<u> </u>	<u> </u>		<u> </u>	<u> </u>	<u> </u>	 	+	 	 	<u> </u>	<u> </u>	 	
	yre pressures		1	<u> </u>	<u> </u>	- I	<u> </u>	 	<u> </u>		 	<u> </u>	<u> </u>	 	 	<u> </u>
Cneck	ront and rear wheel bearings for play	Na	<u> </u>	<u> </u>			<u> </u>	 	<u> </u>							
Check	ike hoses and pipes for leakage	Normal usage		I		ı	1.50	07/7	001:5-		07/67=	 				
-		Severe usage					I: EV	ery 7,5	JUUKITI I	or ev	ery 6 m	UITENS I			.	
Severe usage		Normal usage		I	l l	ı	I I	07/7	00/2-	l l	074675	ontho				
						1. EV	ery 7,5	JUUKIT	i or ev	ery 6 m	UIILNS I	Ι.				
Check fuel hoses and pipes for leakage or deterioration				I	ı		l I								I	

			Service Intervals (Odometer reading or months, whichever occurs first)													
Items	Months		12	24	36	48	60	72	84	96	108	120	132	144	156	168
	Odometer Reading	× 1000 km	15	30	45	60	75	90	105	120	135	150	165	180	195	210
OPERATIONS AFTER ENGINE IS WARMED UP																
Check 1	Check fluid level in CVT		- 1	I	I	- 1	- 1	- 1	-	I	- 1	I	-	ı	- 1	- 1
Change CVT fluid Normal usage Severe usage		Normal usage						R						R		
		Severe usage	R: Every 40,000km													
Change angine oil		Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Change	Change engine oil Seve		R: Every 7,500km													
Deplete engine oil filter		Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Kepiaci	Replace engine oil filter		R: Every 7,500km													
OTHERS																
Check l	oody condition for damage		ı	- 1	Ι	-	-	Ι	-	I	- 1	Ι	- 1	-	I	I
Reset r	Reset maintenance service interval reminder		Ī	Ī	Ī	Ī	I	I	I	I	I	I	I	Ī	I	ı
Road to	Road test		I	I	I	Ī	I	Ī	Ī	I	I	Ī	I	I	- 1	I

NOTES:

- *1: If found any noise from the valve any time, please check the valve clearance.
- *2 : Use only MITSUBISHI MOTORS Genuine Super Long Life Coolant Premium or equivalent with proper mixture ratio of 50% anti-freeze and 50% demineralized or distilled water. Mixing any other type of coolant or the use of non-distilled water will reduce the life expectancy of the factory-fill coolant

"Severe usage" specifications apply to only vehicles used under severe operating conditions.

Severe operating conditions include the following cases :

- (1) Driving in a dusty conditions or exposure to salty air or brine.
- (2) Driving on rough roads, on submerged roads, or hilly areas.
- (3) Driving in cold zones.
- (4) Engine idling for a long time or short-distance travel during cold weather.
- (5) Frequent, sudden application of brakes.

- (6) Towing of a trailer.
- (7) Use as a taxi or as a rent-a-car.
- (8) More than 50% of operation time in heavy city traffic in hot temperatures of 32°C or higher.
- (9) More than 50% of operation time at speeds of 120 km/h or higher in hot temperatures of $30 ^{\circ}\text{C}$ or higher.
- (10) Operation under excessive load.