

26MY MV TRITON INSPECTION AND MAINTENANCE SCHEDULE

For items which indicate both distance and time (in months), the inspection should be made at whichever (distance or time) comes first. Maintenance operation code
 I : Inspection L : Lubrication R : Replace or change

Items	Service Intervals (Odometer reading or months, whichever occurs first)															
	Months	12	24	36	48	60	72	84	96	108	120	132	144	156	168	
	Odometer Reading	x 1000 km	15	30	45	60	75	90	105	120	135	150	165	180	195	210
OPERATIONS INSIDE THE ENGINE COMPARTMENT																
Check drive belt for cracks, fraying, wear, and tension			I		I		I		I		I		I		I	
Check intake air hose and turbocharger oil hose for damage (*check turbocharger hoses only)			I		I		I	I*	I	I*	I	I*	I	I*	I	I*
Check radiator hoses for damage and proper connection			I		I		I		I		I		I		I	
Check engine coolant level in reservoir			I		I		I		I		I		I		I	
Replace engine coolant *1										R						R
Check air cleaner element for clogging and damage	Normal usage		I		I		I		I		I		I		I	
	Severe usage		I: Every 7,500km or every 6 months													
Replace air cleaner element	Normal usage				R					R					R	
	Severe usage		R: More frequently													
Check fluid level in brake reservoir and clutch reservoir			I		I		I		I		I		I		I	
Change brake fluid			R		R		R		R		R		R		R	
Check battery condition			I		I		I		I		I		I		I	
Replace fuel filter			R	R	R	R	R	R	R	R	R	R	R	R	R	R
OPERATIONS UNDER THE VEHICLE																
Check suspension system for damage and looseness			I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check suspension arm ball joints for play, and dust covers for damage			I	I	I	I	I	I	I	I	I	I	I	I	I	I
Lubricate suspension arm, steering linkage and propeller shaft with grease fitting			L		L		L		L		L		L		L	
Check driveshaft boots for damage	Normal usage		I		I		I		I		I		I		I	
	Severe usage		I: Every 7,500km													
Check steering linkage for damage and loose connections (including hoses, seals, boots and power assist fluid - where fitted)			I		I		I		I		I		I		I	
Check manual transmission for oil leakage (In case of leakage, check the oil level)			I		I		I		I		I		I		I	
Check transfer for oil leakage (In case of leakage, check the oil level)			I		I		I		I		I		I		I	
Change gear oil in manual transmission	Normal usage		Maintenance Free													
	Severe usage							R							R	
Change gear oil in transfer	Normal usage						R							R		
	Severe usage		R		R		R		R		R		R		R	
Check front and rear differential for oil leakage (In case of leakage, check the oil level)			I		I		I		I		I		I		I	
Change gear oil in front and rear differential	Normal usage						R						R			
	Severe usage		R		R		R		R		R		R		R	
Check exhaust pipe connections for gas leakage, and check pipe installation			I		I		I		I		I		I		I	
OPERATIONS INSIDE THE VEHICLE																
Check brake pedal and clutch pedal for free play			I		I		I		I		I		I		I	
Check parking brake lever stroke and play			I		I		I		I		I		I		I	
Replace air purifier filter	Normal usage		R	R	R	R	R	R	R	R	R	R	R	R	R	R
	Severe usage		R: More frequently													
Check operation of all functions (including wipers and lights)			I		I		I		I		I		I		I	
OPERATIONS OUTSIDE THE VEHICLE																
Check wheel alignment			I		I		I		I		I		I		I	
Check tyre pressures			I		I		I		I		I		I		I	
Check front and rear wheel bearings for play			I		I		I		I		I		I		I	
Check brake hoses and pipes for leakage	Normal usage		I		I		I		I		I		I		I	
	Severe usage		I		I		I		I		I		I		I	
Check brake pads and discs for wear	Normal usage		I		I		I		I		I		I		I	
	Severe usage		I: Every 7,500km or every 6 months													
Check brake shoe linings and drums for wear	Normal usage		I		I		I		I		I		I		I	
	Severe usage		I		I		I		I		I		I		I	
Check fuel hoses, fuel tank and pipes for leakage or deterioration/damage			I		I		I		I		I		I		I	

Items	Service Intervals (Odometer reading or months, whichever occurs first)															
	Months	12	24	36	48	60	72	84	96	108	120	132	144	156	168	
Odometer Reading	× 1000 km	15	30	45	60	75	90	105	120	135	150	165	180	195	210	
OPERATIONS AFTER ENGINE IS WARMED UP																
Check automatic transmission for fluid leakage. (In case of leakage, check the fluid level)																
Replace automatic transmission oil	Normal usage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	Severe usage						R							R		
Change engine oil	Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
	Severe usage	R: Every 7,500km														
Replace engine oil filter	Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
	Severe usage	R: Every 7,500km														
OTHERS																
Check body condition for damage																
Inspect Adblue level using MUTIII and report on repair order (refill on customer request).																
Perform diesel small quantity injection learning																
Reset maintenance service interval reminder																
Road test																

NOTE:

*1 : Use only MITSUBISHI MOTORS Genuine Super Long Life Coolant Premium or equivalent with proper mixture ratio of 50% anti-freeze and 50% demineralized or distilled water.

"Severe usage" specifications apply to only vehicles used under severe operating conditions.

Severe operating conditions include the following cases :

- (1) Driving in a dusty conditions or exposure to salty air or brine.
- (2) Driving on rough roads, on submerged roads, or hilly areas.
- (3) Driving in cold zones.
- (4) Engine idling for a long time, or short distance travel during cold weather.
- (5) Frequent or sudden application of brakes.

- (6) Trailer towing.
- (7) Use as a taxi, hire or rental vehicle.
- (8) More than 50% of heavy city traffic operation in temperatures above 32°C .
- (9) More than 50% of operation time at speeds of 120km/h or higher, during temperatures of 30°C or higher.
- (10) Operation under excessive load.