

## PERIODIC INSPECTION AND MAINTENANCE SCHEDULE 20 MY XD ASX

For items which indicate both distance and time (in months), the inspection should be made at whichever (distance or time) comes first.

### Maintenance operation code

**I** : Inspection **L** : Lubrication **R** : Replace or change **●** : Applicable **None** : Not applicable

Items			Service Intervals (Odometer reading or months, whichever occurs first)														
	Months	Odometer Reading	12	24	36	48	60	72	84	96	108	120	132	144	156	168	
		× 1000 km	15	30	45	60	75	90	105	120	135	150	165	180	195	210	

### OPERATIONS INSIDE THE ENGINE COMPARTMENT

Check drive belt for cracks, fraying, wear, and adjust its tension			I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check intake air hose				I				I	I	I	I	I	I	I	I	I
Replace spark plugs	Platinum-tipped type		R : Every 90,000km													
Check valve clearance * If valve noise increases check valve clearance, except actual inspection.			I : Every 90,000km													
Check radiator hoses for damage and proper connection				I				I			I			I		I
Check engine coolant level in reservoir			I	I	I	I	I	I	I	I	I	I	I	I	I	I
Replace engine coolant			R: First 165,000km or 8 years, thereafter every 105,000km or 5 years													
Check air cleaner element for clogging and damage	Normal usage		I	I	I	I	I	I	I	I	I	I	I	I	I	I
	Severe usage		I : Every 7,500km or every 6 months													
Replace air cleaner element	Normal usage				R			R			R			R		
	Severe usage		R : More frequently													
Check fluid level in brake reservoir and clutch reservoir			I	I	I	I	I	I	I	I	I	I	I	I	I	I
Replace brake fluid				R			R			R			R			R
Check battery condition			I	I	I	I	I	I	I	I	I	I	I	I	I	I
Replace fuel filter			R : Every 150,000km or every 10years													

### OPERATIONS UNDER THE VEHICLE

Check suspension system for damage and looseness			I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check suspension arm ball joints for play, and dust covers for damage			I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check driveshaft boots for damage	Normal usage		I	I	I	I	I	I	I	I	I	I	I	I	I	I
	Severe usage		I : Every 7,500km													
Check steering linkage for damage and loose connections (including seals and boots)			I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check manual transmission for oil leakage (In case of leakage, check the oil level)			I	I	I	I	I	I	I	I	I	I	I	I	I	I
Replace gear oil in manual transmission	Normal usage		R : Every 195,000km													
	Severe usage		R : Every 90,000km													
Check front differential for oil leakage (In case of leakage, check the oil level)			I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check exhaust pipe connections for gas leakage, and check pipe installation				I			I			I			I			I

**I : Inspection L : Lubrication R : Replace or change ● : Applicable None : Not applicable**

Items			Service Intervals (Odometer reading or months, whichever occurs first)															
	Months		12	24	36	48	60	72	84	96	108	120	132	144	156	168		
	Odometer Reading	× 1000 km	15	30	45	60	75	90	105	120	135	150	165	180	195	210		
<b>OPERATIONS INSIDE THE VEHICLE</b>																		
Check brake pedal and clutch pedal for free play			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Check parking brake lever stroke and play			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Replace air purifier filter			Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R		
			Severe usage	R : More frequently														
<b>OPERATIONS OUTSIDE THE VEHICLE</b>																		
Check wheel alignment (Visual inspection for tyre wear)				I		I		I		I		I		I		I		
Check front and rear wheel bearings for play						I					I				I			
Check brake hoses and pipes for leakage			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Check brake pads and discs for wear			Normal usage	I	I	I	I	I	I	I	I	I	I	I	I	I		
			Severe usage	I : Every 7,500km or every 6 months														
Check fuel hoses and pipes for leakage or deterioration				I		I		I		I		I		I		I		
<b>OPERATIONS AFTER ENGINE IS WARMED UP</b>																		
Check automatic & CVT transmission for fluid leakage (In case of leakage, check the fluid level)			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Replace automatic transmission fluid CVT			Normal usage	R : Every 90,000km														
			Severe usage	R : Every 45,000km														
Replace engine oil (Refer to owners manual for oil specifications)			Normal usage	R : Every 15,000km or every 12 months														
			Severe usage	R : Every 7,500km														
Replace engine oil filter			Normal usage	R : Every 15,000km or every 12 months														
			Severe usage	R : Every 7,500km														
<b>OTHERS</b>																		
Check body condition for damage			I : Every year															
Road test			I	I	I	I	I	I	I	I	I	I	I	I	I	I		

**NOTE:**

\*1 : If found any noise from the valve any time, please check the valve clearance.

"Severe usage" specifications apply to only vehicles used under severe operating conditions.

Severe operating conditions include the following cases :

- (1) Driving in a dusty area or in an area in which the vehicle is likely to be exposed to salty air or brine.
- (2) Driving on rough roads, on submerged roads, or hilly areas.
- (3) Driving in cold zones.
- (4) Engine idling for a long time or short-distance travel during cold weather.
- (5) Frequent, sudden application of brakes.
- (6) Towing of a trailer.
- (7) Use as a taxi or as a rent-a-car.
- (8) More than 50% of operation time in heavy city traffic in hot temperatures of 32°C or higher.
- (9) More than 50% of operation time at speeds of 120km/h or higher in hot temperatures of 30°C or higher.
- (10) Operation under excessive load.