PERIODIC INSPECTION AND MAINTENANCE SCHEDULE 21MY ASX

For items which indicate both distance and time (in months), the inspection should be made at whichever (distance or time) comes first.

Maintenance operation code

1:Inspection *1:A	audible check L:Lubrication R:Replace or change														
				ervice	Inter	rvals (Odom	eter re	adin	g or n	nonth	s, whi	chever	occui	s first)
Items	Months		12	24	36	48	60	72	84	96	108	120	132	144	156 1
	Odometer Reading	× 1000 km	15	30	45	60	75	90	105	120	135	150	165	180	195 2
OPERATIONS INS	SIDE THE ENGINE COMPARTMENT														
Check drive belt for cracks, fraying, wear, and tension			Ι	Ι	Ι	I	I	Ι	I	I	Ι	I	Ι	Ι	I
Replace spark plugs								R						R	
Check valve clearance *If excessive valve noise evident, check valve clearance		*I	*I	*I	*I	*I	Ι	*I	*I	*I	*I	*I	I	*I '	
Check radiator hoses for damage and proper connection			I		Ι		Ι		I		Ι		Ι		
Check engine coolant level in reservoir		Ι	Ι	Ι	I	Ι	Ι	I	I	I	I	Ι	I	I	
Change engine coolant			R	Firs	t 165,	000kr	m or 8	years	the	reafte	er eve	ry 108	5,000k	m or	5 years
Check air cleaner element for clogging and damage Normal usage		Ι	Ι	Ι	I	Ι	Ι	I	I	I	I	Ι	I	I	
Severe usage			I :Every 7,500km or every 6 months												
Replace air cleaner element Normal usage				R			R			R			R		
Severe usage			R:More frequently												
Check fluid level in brake reservoir and clutch reservoir			Ι	Ι	Ι	I	I	Ι	I	I	I	I	Ι	Ι	I
Change brake fluid			R		R		R		R		R		R	1	
Check battery condition		Ι	Ι	Ι	I	Ι	Ι	I	I	I	I	Ι	I	I	
Replace fuel filter			R: Every 150,000km or every 10years												
	DER THE VEHICLE														
Check suspension s	Check suspension system for damage and looseness		Ι	Ι	Ι	I	I	Ι	I	Ι	Ι	I	Ι	Ι	I
Check suspension arm ball joints for play, and dust covers for damage		Ι	Ι	Ι	I	I	Ι	I	I	Ι	I	Ι	Ι	I	
Check driveshaft boots for damage Normal usage		Normal usage	Ι	Ι	Ι	Ι	I	Ι	I	Ι	Ι	I	Ι	Ι	Ι
Severe usage			I ∶Every 7,500km												
Check steering linkage for damage and loose connections (including seals and boots)			Ι	I	Ι	Ι	I	Ι	I	I	I	I	I	Ι	I
Check manual transmission for oil leakage (In case of leakage, check the oil level)			I	Ι	Ι	I	Ι	Ι	I	I	I	I	I	Ι	I
Change gear oil in r	Change gear oil in manual transmission Normal usage		ge R : Every 195,000km												
Severe usage			R : Every 90,000km												
Check exhaust pipe connections for gas leakage, and check pipe installation			I		Ι		Ι		I		Ι		I		

I: Inspection *I: Audible check L: Lubrication R: Replace or change

1 · Inspection 1 ·	Addible check L. Lubrication K. Kepiace or change																
				Service Intervals (Odometer reading or months, whichever occurs first)													
Items	Months			12	24	36	48	60	72	84	96	108	120	132	144	156	168
	Odometer Reading	×	1000 km	15	30	45	60	75	90	105	120	135	150	165	180	195	210
OPERATIONS INSIDE THE VEHICLE																	
Check brake and clutch pedal for free play			Ι	I	I	I	I	Ι	I	I	Ι	Ι	Ι	I	I	I	
Check parking brake lever stroke and play		Ι	Ι	I	I	I	Ι	I	Ι	Ι	Ι	Ι	I	I	Ι		
Replace air purifier filter		R	R	R	R	R	R	R	R	R	R	R	R	R	R		
Check operation of all functions and lights		I	I	Ι	I	I	Ι	I	I	Ι	Ι	Ι	I	I	Ι		
OPERATIONS OF	UTSIDE THE VEHICLE																
Check wheel alignment				Ι		Ι		Ι		Ι		Ι		Ι		Ι	
Check tyre pressures		I	Ι	I	I	I	I	I	I	I	Ι	Ι	I	I	Ι		
Check front and rear wheel bearings for play					Ι				I				I				
Check brake hoses and pipes for leakage		Ι	Ι	I	Ι	I	Ι	I	Ι	Ι	Ι	Ι	I	I	Ι		
Check brake pads	Check brake pads and discs for wear Normal usage Severe usage		ormal usage	I	Ι	I	I	I	Ι	I	I	Ι	I	Ι	I	I	Ι
			evere usage	I : Every 7,500km or every 6 months													
Check fuel hoses and pipes for leakage or deterioration			Ι		Ι		Ι		I		Ι		I		Ι		
OPERATIONS A	FTER ENGINE IS WARMED UP			•		-	-										
Check fluid level i	in CVT			I	I	I	I	I	Ι	I	I	Ι	Ι	Ι	I	I	Ι
Change CVT fluid		No	ormal usage						R						R		
	Severe usage		vere usage														
Change engine oil		No	ormal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R
		Se	evere usage					ry 7,5	00km	1							
Replace engine oil	Replace engine oil filter Normal usage		ormal usage	R	\mathbf{R}	R	R	R	R	R	R	R	R	R	R	R	R
Severe usage			evere usage														
OTHERS																	
Check body condition for damage		I : Every year															
Reset maintenance service interval reminder		Ι	I	I	I	I	I	Ι	I	Ι	Ι	Ι	Ι	I	I		
Road test		I	I	I	I	I	I	I	I	I	I	I	I	I	I		

NOTE:

Severe operating conditions include the following cases:

- (1) Driving in a dusty area or in an area in which the vehicle is likely to be exposed to salty air or brine.
- (2) Driving on rough roads, on submerged roads, or hilly areas.
- (3) Driving in cold zones.
- (4) Engine idling for a long time or short-distance travel during cold weather.
- (5) Frequent, sudden application of brakes.
- (6) Towing of a trailer.
- (7) Use as a taxi or rental car.
- (8) More than 50% of operation time in heavy city traffic, or temperatures at, or above 32°C
- (9) More than 50% of operation time at speeds of 120km/h or higher in hot temperatures of 30°C or higher.
- (10) Operation under excessive load.

^{*1:} If excessive valve noise is evident, check the valve clearance.

[&]quot;Severe usage" specifications apply to only vehicles used under severe operating conditions.