



**I : Inspection L : Lubrication R : Replace or change ● : Applicable None : Not applicable**

Items			Service Intervals (Odometer reading or months, whichever occurs first)															
			12	24	36	48	60	72	84	96	108	120	132	144	156	168		
	Months	Odometer Reading	15	30	45	60	75	90	105	120	135	150	165	180	195	210		
<b>OPERATIONS INSIDE THE VEHICLE</b>																		
Check brake pedal for free play			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check parking brake lever stroke and play			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Replace air purifier filter			Normal usage		R	R	R	R	R	R	R	R	R	R	R	R	R	R
<b>OPERATIONS OUTSIDE THE VEHICLE</b>																		
Check wheel alignment (Visual inspection for tyre wear)				I		I		I		I		I		I		I		I
Check front and rear wheel bearings for play						I					I				I			I
Check brake hoses and pipes for leakage			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check brake pads and discs for wear			Normal usage		I	I	I	I	I	I	I	I	I	I	I	I	I	I
			Severe usage		I : Every 7,500km or every 6 months													
Check and adjust brake shoe linings and inspect drums (drum in disc) for wear			Normal usage			I		I		I		I		I		I		I
			Severe usage		I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check operation of handbrake (vehicles with electric parking brake)					I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check fuel hoses and pipes for leakage or deterioration						I		I		I		I		I		I		I
<b>OPERATIONS AFTER ENGINE IS WARMED UP</b>																		
Check automatic transmission for fluid leakage (In case of leakage, check the fluid level)					I	I	I	I	I	I	I	I	I	I	I	I	I	I
Replace automatic transmission fluid			Normal usage		R : Every 195,000km													
			Severe usage		R : Every 90,000km													
Replace engine oil (Refer to owners manual for oil specifications)			Normal usage		R : Every 15,000km or every 12 months													
			Severe usage		R : Every 7,500km													
Replace engine oil filter			Normal usage		R : Every 15,000km or every 12 months													
			Severe usage		R : Every 7,500km													
Check engine idling speed					I	I	I	I	I	I	I	I	I	I	I	I	I	I
<b>OTHERS</b>																		
Check body condition for damage					I : Every year													
Check the common rail diesel engine (small injection quantity learning)			Diesel		I	I	I	I	I	I	I	I	I	I	I	I	I	I
Road test					I	I	I	I	I	I	I	I	I	I	I	I	I	I

NOTE:

\*1 : If excessive noise is heard from the valve train at any time, please check the valve clearance.

"Severe usage" specifications apply to only vehicles used under severe operating conditions.

Severe operating conditions include the following cases :

- (1) Driving in a dusty area or in an area in which the vehicle is likely to be exposed to salty air or brine.
- (2) Driving on rough roads, on submerged roads, or hilly areas.
- (3) Driving in cold zones.
- (4) Engine idling for a long time or short-distance travel during cold weather.
- (5) Frequent, sudden application of brakes.
- (6) Towing of a trailer.
- (7) Use as a taxi or as a rent-a-car.
- (8) More than 50% of operation time in heavy city traffic in hot temperatures of 32°C or higher.
- (9) More than 50% of operation time at speeds of 120km/h or higher in hot temperatures of 30°C or higher.
- (10) Operation under excessive load.